



manual book



MODEL:JS-STM029

Content

1. Mainboard Features.....	2
2. Technical Parameters.....	3
3. Mainboard wiring diagram.....	4
4. Mainboard parameter setting operation flow.....	5
5. Parameter setting table.....	5-7
6. Device installation.....	7
7. Troubleshoot code.....	8
8. Safety attentions.....	8
9. Transportation and storage.....	8

1.Main-board Features

1. This control board is suitable for the control of wing gates, swing gates and quick-pass gates equipped with DC brushless servo motors.
2. This control board adopts ARM embedded system as the core of control. It has the advantages of faster processing speed, more powerful function expansion and more stable performance.
3. Adopt full data management, all function parameters are set digitally, setting operation is simpler.
4. The motor drive runs according to the movement curve, the operation is stable and reliable, the state is smooth, and the brake movement is coordinated and synchronized.
- 5.The equipment is fully functional, with an illegal break-in alarm, a trailing alarm, a reverse processing, an anti-pinch on the ram, and a free passage setting
6. Single or multiple people, motor stall protection, delay of exit passage, peak traffic mode, emergency traffic mode and other functions.
- 7.Complete interface mode, both PNP and NPN infrared beams on the market can be used. The infrared sensing sequence can be set up and down.
8. Customer-defined indicator output mode. The side lights and ceiling lights can be set according to the needs of the device to display the status of the lamp and the common cathode and common anode of the lamp.
- 9.The control panel comes with a voice broadcast function, and the directions of the greeting language at the entrance and exit can be set in the menu.

2. Technical Parameters

Input power:24V/3A

Drive Motor:24V/60W

Infrared sensor interface:NPN normally open collector open circuit

Communication interface:RS232serial port

Communication distance: ≤ 10 meter

Input interface: 12V level signal or 12V pulse signal with pulse width > 100 ms, drive current > 10 mA

Output power:DC12V ≤ 1 A

relative humidity:0-90%(No condensation)


environment temperature:-15C-60C

Passing speed: 35 people/min (normally open mode), 25 people/min (normally closed mode)


Gate opening and closing time: 0.8 seconds for flap gates;1-2 seconds for swing gates.

3. Main board wiring diagram

Please pay attention that these three wired cable color should match each other like bellow photo (First yellow , middle is green , then black color (both on main board and slave board))

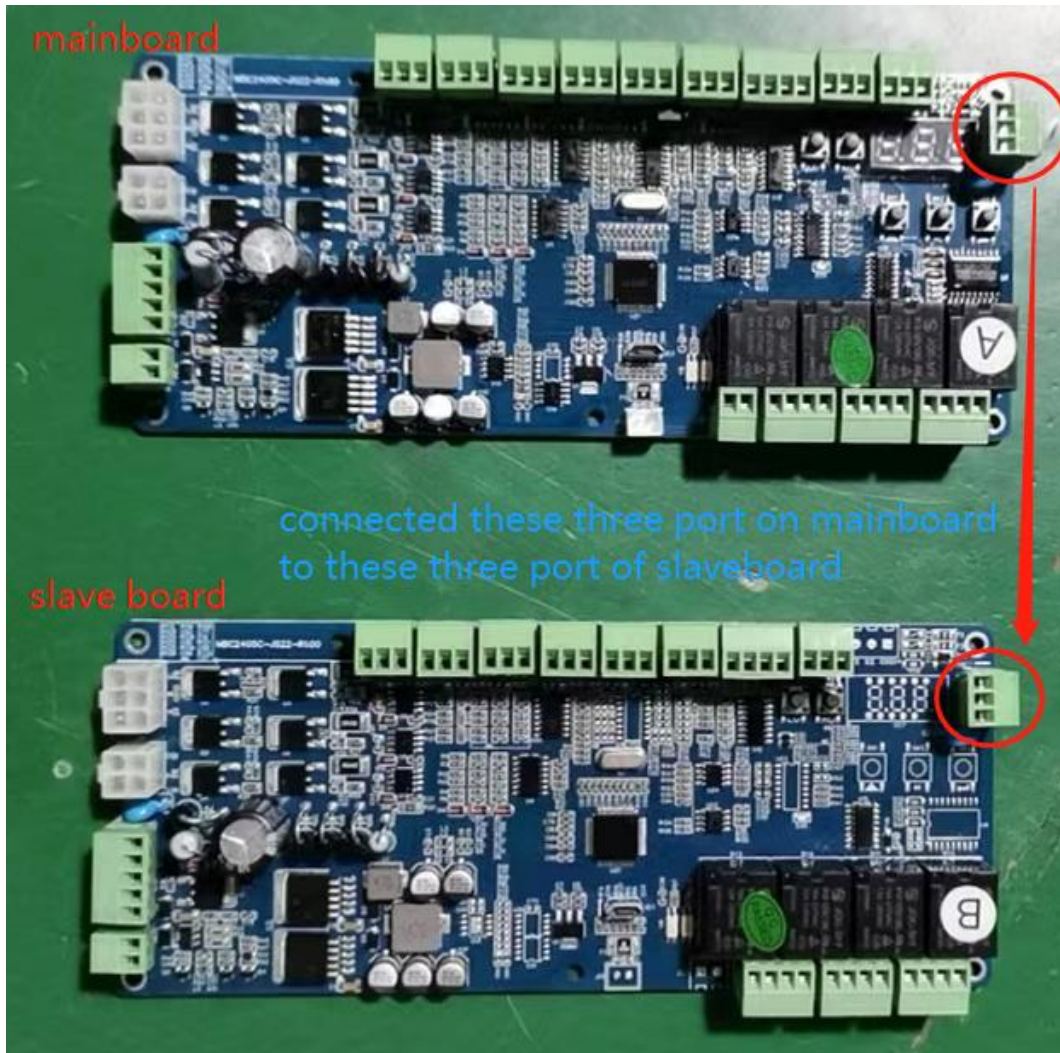


Connected 110v-220v power supply to air switch (both main board + slave board)

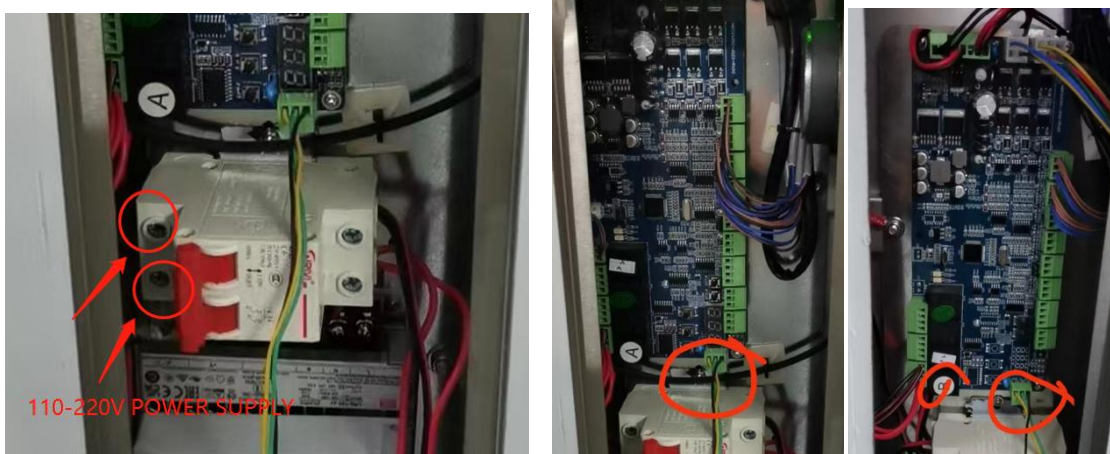


4. Main-board parameter setting operation flow

1. operating procedures:

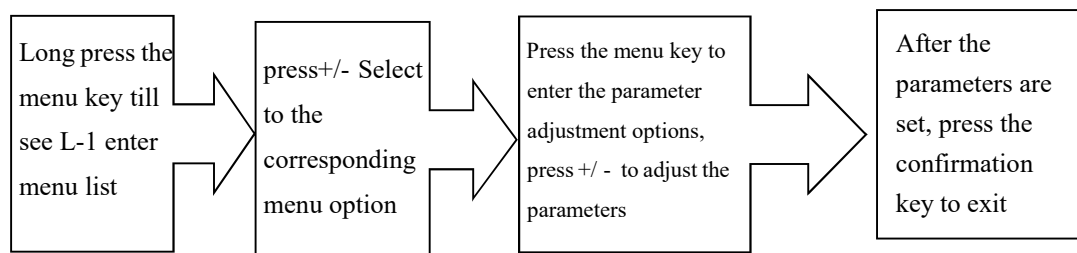

5. Device Installation

- ◆ Place the turnstiles in the correct direction and combination.
- ◆ After connecting the power and testing the basic functions are normal, turn off the power and place the turnstile in the entrance where it needs to be installed.
- ◆ Mark the drilling position, punch hole to fix the gate.
- ◆ After set holes, drilled holes, and embedded M12 anchor bolts or expansion bolts.

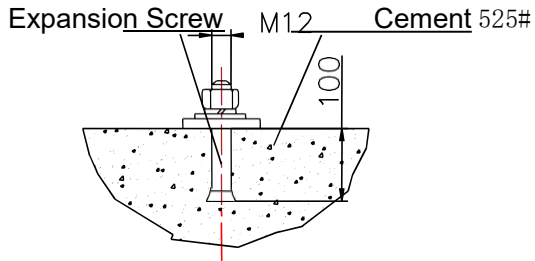

Warning

1. The depth of buried PVC pipes should be greater than 60mm, and the height of exposed ground should be greater than 50mm. And the outlet is bent back to prevent water from entering the line pipe
2. When installing access gates, the left and right gates of each channel should be aligned;
3. Connect the system protection ground wire;
4. If the equipment is used outdoors, a 100~200mm high cement level should be built at the equipment installation place. Tailai to isolate moisture, and add sunscreen and rainproof facilities such as roof;
5. After the equipment is installed, the state inspection and functional debugging are qualified before it can be put into normal use.

6. Troubleshooting code meanings

Display E-1 :Main Motor Hall Error:adjust L-15 to 1

Display E-2 :Slave Motor Hall Error :adjust L-16 to 1

Unmentioned errors, contact with Karsun team for technical trouble-shooting.

7. Safety attentions

- Do not strike the product with hard objects.
- Handle carefully when using to avoid strong collision with hard objects.
- The product must not be exposed to water or corrosive liquids.
- If smoke or odor is found in the product, disconnect the power immediately.
- If the product is abnormal, please contact the dealer in time. Do not attempt to repair it by yourself. If you do not contact the dealer, handle it without permission, and the company will not be responsible for any damage.

8. Transportation and storage

- Handle the product with care when handling it.
- During the transportation and storage of the product, care should be taken in a dry and free of corrosive or explosive gas in the surrounding air, and measures should be taken to prevent moisture, rain, sun, and corrosion

Thank you for your support, we are very happy to be your partner and provide you with our services. If you encounter any problems during the installation, you can contact your service manager at any time. We will serve you wholeheartedly ,ENJOY!

----- KARSUN TEAM